

DRINKS COOLER INSTRUCTION MANUAL



Model Number - BF50EN
EAN Code - 8422248611749

TABLE OF CONTENTS

Important safety instructions	2 - 6
Intended use	6
Parts list	7
Before first use	9
Installation instructions	8 - 9
Operation	10
Cleaning and maintenance	11
Environmental protection	12
Technical data	12 - 13
Guarantee	13

IMPORTANT SAFETY INSTRUCTIONS



Read this instruction manual carefully before using the appliance. It contains important information for your safety as well as operating and maintenance advice.

1. Observe all safety instructions to avoid damage through improper use! Follow all warnings on the appliance.
2. Keep this instruction manual for future use. Should this appliance be passed on to a third party, then this instruction manual must be included.
3. No liability will be accepted for damage resulting from improper use or non-compliance with these instructions.

IMPORTANT SAFETY INSTRUCTIONS

4. Only use this appliance for its intended use. This appliance is intended for indoor use only.
5. This appliance is intended to be used in a normal domestic environment only. Commercial usage is not covered by the manufacturers warranty.
6. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
7. Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Keep the appliance away from any hot surfaces and open flames. Always operate the appliance on a level, stable, clean and dry surface. The appliance is suitable for climatic class 4. Protect the appliance against heat (over 32°C) and cold (under 16°C), dust, direct sunlight, moisture, dripping and splashing water.
9. The maximum loading of each type of shelf should not exceed 8 kg.
10. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
11. When disposing of the appliance do so only at an authorized waste disposal centre. Do not expose to flame.

IMPORTANT SAFETY INSTRUCTIONS

WARNINGS!



- Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer. Do not use any heat sources, such as candles or heaters, to speed up defrosting.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- The refrigerant (R600a) is flammable.
- The refrigerant isobutene (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.

DANGER OF FIRE AND EXPLOSION!



- Do not use the appliance near explosive or flammable vapours.
- Do not store any explosive or flammable substances, like benzene, liquid gas or glue, in the appliance.
- If gas flows out of the appliance, do not pull the power plug from the outlet as this can cause sparks and fire.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **CAUTION: RISK OF FIRE!**

WARNINGS!



- If your eyes have been in contact to the refrigerant, wash under running water and go to a doctor immediately.
- To avoid a hazard due to instability of the appliance, it must be installed according to the instructions.

IMPORTANT SAFETY INSTRUCTIONS

12. Before connecting the appliance to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the appliance rating label.
13. **Never use a damaged appliance!** Disconnect the appliance from the wall outlet and contact your supplier if it is damaged.



DANGER OF ELECTRIC SHOCK! Do not attempt to repair the appliance yourself. In case of malfunction, repairs are to be conducted by qualified personnel only.

14. **Proper disposal of refrigerators**
 - Before you dispose of an old cooler:
 - Remove the doors.
 - Leave the shelves in place so children cannot easily climb inside.
 - Have the cooler circuit removed by a qualified service technician.
 - Do not damage the cooler circuit during storage and transportation of old appliances! Make sure that the evaporator pipes, refrigerant circuit, and surface coverings are not damaged. Avoid contact with the eyes as the cooler can cause serious eye injury.
 - Do not store old appliance near sources of heat and ignition. The cooler of this appliance is highly flammable.
 - Disable discarded appliances by unplugging the plug and cutting the power cord.
15. To avoid damaging the cord, do not squeeze, bend or chafe it on sharp edges. Keep it away from hot surfaces and open flames as well.
16. Lay out the cord in such a way that no unintentional pulling or tripping over it is possible.
17. Do not place heavy objects on top of the appliance. Do not place objects with open flames (e.g. candles) on top of or beside the appliance. Do not place objects filled with water (e.g. vases) on or near the appliance.

IMPORTANT SAFETY INSTRUCTIONS

18. For additional protection, we recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliance.
19. This appliance is classified as protection class I and must be connected to a protective ground (Earth).
20. Do not pull the power plug out of the wall outlet by the power cord and do not wrap the power cord around the appliance.
21. Connect the power plug to an easily reachable wall outlet so that in case of an emergency the appliance can be unplugged immediately. Pull the power plug out of the wall outlet to completely switch off the appliance. Use the power plug as the disconnection device.
22. Disconnect the power plug from the wall outlet when not in use and before cleaning.
23. Always turn the appliance off before disconnecting the power plug.
24. In the event of fire, first pull the power plug out of the power outlet or disconnect the appliance from the power supply before taking appropriate measures to fight the fire.
25. Never use an extension cord – Risk of overheating! If the power cord does not reach the nearest wall outlet, either rearrange the store layout or ask qualified electrician to fix a new outlet.
26. **Important!** Allow the appliance to stand upright for 8 hours before connecting to a wall outlet for the first time, in order to allow the refrigerant to settle.

 
INTENDED USE

This drinks cooler is intended for keeping alcoholic wines, juices, nutritional drinks, soft drinks,snacks,water,beer,etc., cold and fresh.

PARTS LIST

FOR MODEL BF50EN

No.	Description
1	Door hinge cap
2	Door hinge
3	Double layer glass door
4	Power cord with power plug
5	Temperature knob 0-5 (on the back of the unit)
6	Shelf
7	Cooler enclosure
8	Drain pipe
9	Compressor

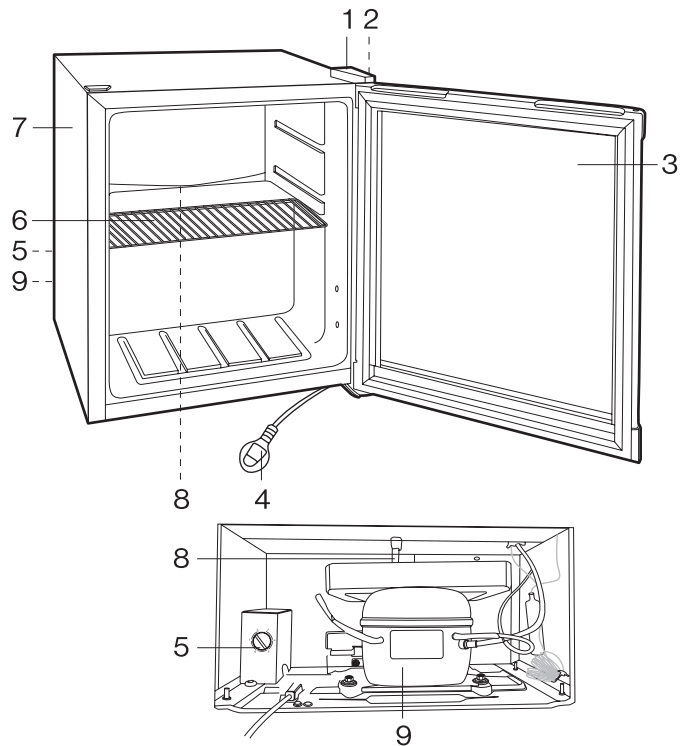

BEFORE FIRST USE

 
- Remove all packaging materials.
- **Warning!** Packaging materials are not a toy. Children should not play with the packaging materials, as they pose a risk of swallowing and suffocation!
- Check for completeness and damages that may have occurred while transporting the product. In case of damages or incomplete delivery, please contact your dealer (↳ Guarantee).
- Clean the appliance (↳ Cleaning and care).
- Make sure all parts of the appliance are completely dry.
- Place the appliance on a horizontal, stable, and heat-resistant surface.
- Ensure that there is sufficient ventilation. Keep a minimum distance of 15cm between the cooler and other appliances or walls.



Note: After moving the cooler, allow it to stand upright for 8 hours before connecting it into a wall outlet

INSTALLATION INSTRUCTIONS

When locating the cooler, keep a minimum fixed distance of 15cms between all sides of the cooler and the wall or other surfaces For details, refer to the illustration below:

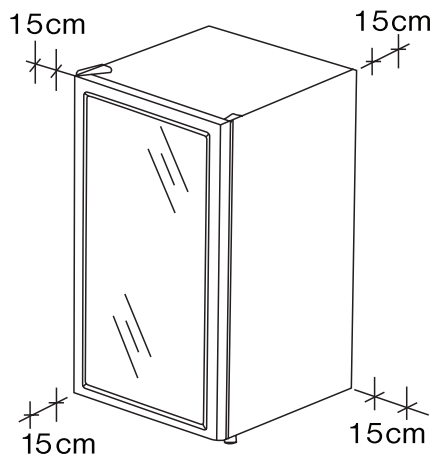

INSTALLATION INSTRUCTIONS

Reversing the door orientation

The default left side orientation of the glass door can be changed to the right side. Use the following procedure to change the side of the door hinge.

- Turn the temperature knob to the **O** position and disconnect the power plug from the wall outlet.
- Tilt the cooler backwards to an angle of 45° and securely support it.
- Loosen the screws on the base of the cooler and remove the bottom hinge.
- Place the bottom hinge on the opposite side and retighten it with screws.
- Place the cooler back to the upright position.
- Remove the door hinge cap.
- Loosen the screws and remove the door hinge.
- Place the door hinge on the opposite side and retighten it with screws.
- Make sure that the glass door is in the vertical position and can be closed easily.
- Reinstall the hinge cap.



Note: After reversing the door hinge, the door gasket may get loose. Should you notice a gap between the gasket and the cabinet, gently pull it out to seal the gap. A correct gasket positioning is the key to prevent refrigerated air from escaping.


Ideas for saving energy



- Locate the product in the coolest part of the room, out of direct sunlight, and away from sources of heat. If this is not possible, a section of cabinetry or an added layer of insulation will help the cooler operate more efficiently.
- Level the cooler so that the door closes tightly.
- From time to time, adjust the temperature inside the refrigerator, since it changes along with:
 - the room temperature
 - the frequency at which the refrigerator door is opened and how long it stays open
 - the items inside
- Place the cooler at least 15cm away from walls or other articles.
- Do not cover the product's ventilation openings.

OPERATION

- Connect the power plug to a suitable wall outlet.
- Turn the temperature knob to adjust the temperature. Setting **1** is the highest temperature and setting **5** is the lowest temperature.

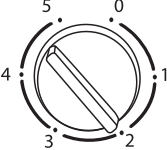Model - BF50EN	
<p>Temperature knob: 0 - 5 (located at the back of the unit)</p> <p>0 - off</p> <p>1 - highest temperature setting (about 18°C)</p> <p>5 - lowest temperature setting (coldest, about 4°C)</p>	



Note: The settings (**1-3**) are generally intended to be used during the winter, and the settings (**4-5**) during the summer.

- First set the temperature to the max. position. After 20 minutes, adjust the temperature knob to the middle setting.

CLEANING AND MAINTENANCE

Cleaning



Before cleaning and maintaining the product, disconnect the power plug from the wall outlet.

- Remove all items from the cooler.
- Wipe the inside and outside surfaces using a damp cloth.
Tip: Acid substances can corrode the plastic parts of the cooler. Do not allow this type of substance (e.g. lemon juice, juice from orange peels) to come in contact with the cooler.
- **After cleaning, wipe all parts thoroughly and allow them to dry.**
- Do not use abrasive sponges or cleaning agents, steel wool, or metallic utensils to clean the interior or exterior of the appliance.



- To save energy, clean the compressor (9) at the back of the cooler using a brush or a vacuum cleaner once a year.
- Regularly check the drain pipe (8) at the back panel of the cooler. Clean it whenever the drain is blocked.

Important!

When the cooler is not in use,



- turn the temperature knob to the **0** position and disconnect the power plug from the wall outlet.
- remove all items from the inside.
- clean and dry the inside.
- leave the door slightly open to avoid mold to grow.

Defrosting

- This cooler has a built-in automatic defrosting function, which is activated automatically when the compressor is not running. The temperature knob must be set to the setting (1).



Note: Should the frost layer be more than 3mm thick, the cooler must be switched off, defrosted, and cleaned.

ENVIRONMENTAL PROTECTION



Discarded electric appliances are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centres.


TECHNICAL DATA

	Model BF50EN
Power supply:	220 - 240 V~, 50 Hz
Rated current:	0.5 A
Protection class:	Class I
Energy consumption:	0.5 kWh/24 h (Ta: 25°C; Tc: 12°C)
Refrigerant:	R600a (18 g)
Climate class:	N,SN
Blowing gas:	Cyclopentane
Temperature range:	4-18 °C
Noise level:	42 dB(A)
Bulb type:	No bulb
Weight:	16 kg
Dimensions (W x D x H):	430 x 480 x 515 mm
Net capacity:	46 l

Remark: Ta: Ambient temperature; Tc: Setting temperature

TECHNICAL DATA

 Electrical diagram for Model - BF50EN

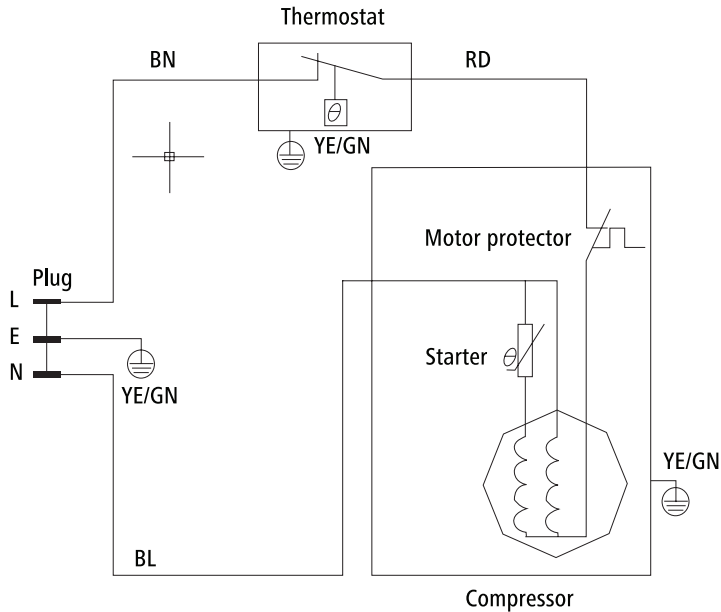

Recycling & disposal



Waste electrical products (WEEE) should not be disposed of with household waste.

Please recycle where facilities exist. Check with your local governmental authority, domestic waste disposal services or the retailer where the product was bought for recycling advice.

The wheellie bin symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling. On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly.

Commercial Guarantee

This drinks chiller is guaranteed for 24 months from the date of purchase, if bought in store, or delivery, if bought online, for normal (non-professional or commercial) household use. You may only make a claim under this guarantee upon presentation of your sales receipt or purchase invoice. Please keep your proof of purchase in a safe place.

The guarantee covers all parts and labour costs associated with the repair of the product if it is found to be defective due to faulty materials or workmanship within 24 months from the date of purchase or delivery subject to the exclusions set out below and provided it was used for the purpose for which it is intended and subject to installation, cleaning, care and maintenance in accordance with the information contained in the user manual. This guarantee does not cover defects and damage caused by normal wear and tear of the product and damage that could be the result of improper use, faulty installation, storage or assembly, neglect, accident, modification of the product, consumable items.

If the drinks chiller is defective, we reserve the right to repair it. However, if, during the guarantee period, the product becomes irreparable as agreed by an online technical advisor or engineer then we reserve the right, at our discretion, to exchange the defective product with a replacement or if no longer available offer a refund.

Should any person other than an engineer approved by our authorised agent modify or attempt to repair the product then the guarantee will be invalid. This guarantee only applies to the country of purchase or delivery and is not transferrable to any other countries. This guarantee is non-transferable to any other person or product. Relevant local law will apply to this guarantee. This guarantee is in addition to and does not affect your statutory rights relating to faulty goods as a consumer.

Guarantee related queries should be addressed to a store affiliated with the distributor you purchased the product from.

To arrange a service call, please contact our customer services on one of the following Toll Free numbers, you must contact the number in the country in which you purchased the product from:

UK 0800 324 7818

Eire 1800 932 230