

CLGOGUIT4 3663602842170

Checking instructions

Things to check before you start

- To avoid the risks that are always present when you use a gas appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.
- Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on UK 0800 324 7818 or Eire 1800 932 230.
- Check the package and make sure you have all of the parts listed.
- Decide on the appropriate location for your product.
- The specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts. If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

Safety

These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.

- WARNING:** The connection of the hob to the gas network or gas cylinder must be made by means of a rigid copper or steel pipe with fittings complying with local regulations. These fittings are NOT supplied. THIS OPERATION MUST BE MADE BY A QUALIFIED GAS INSTALLER.
- This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
- Accessible parts may become hot during use. Young children should be kept away.
- Care should be taken to avoid touching the appliance when it is hot.
- The Manufacturer highly recommends that this appliance be kept out of the reach of babies and small children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Means for isolating the appliance must be incorporated in the fixed wiring in accordance with the current wiring regulations. An omnipolar circuit breaker having a contact separation of at least 3 mm in all poles should be connected in the fixed wiring.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
- Do not allow the electric cables to touch the hot parts of the appliance.
- Do not install the appliance outdoors, in any damp place or in an area which may be prone to

water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.

- ✓ Please dispose of the packing material carefully.
- ✓ Do not use flammable sprays in close vicinity to the appliance.
- ✓ We also recommend that great care be taken during use and cleaning. Read the cleaning and maintenance sections for this appliance carefully.
- ✓ A steam cleaner is not to be used.
- ✓ The appliance is not intended to be operated by means of external timer or separated remote-control system.
- ✓ The appliance is for domestic use only.
- ✓ When a cooking zone has been on for a long time, the surface remains hot for some time afterwards so do not touch the metal surface.
- ✓ Do not store detergents or flammable materials beneath the hob.
- ✓ Do not leave hot oils or fats unattended as they may catch light.
- ✓ The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.
- ✓ **WARNING!** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire.
- ✓ Never try to extinguish a fire with water, but switch off the appliance and then cover the flame with a lid or a fire blanket.
- ✓ **WARNING! Risk of fire!** Do not store items on the cooking surfaces.
- ✓ Prior to installation, ensure that the local distribution conditions (nature of the gas and gas pressure) and the adjustment of the appliance are compatible.
- ✓ The adjustment conditions for this appliance are stated on the label (or data plate).
- ✓ This appliance is not connected to a combustion products evacuation device.
- ✓ It shall be installed and connected in accordance with current installation regulations. Particular attention shall be given to the relevant requirements regarding ventilation.
- ✓ **CAUTION:** This appliance is for cooking purposes only. It must not be used for other purposes, for example room heating.
- ✓ Don't put cooking vessels on the hotplate that overlap its edges.
- ✓ **CAUTION:** In the case of hotplate glass breakage:
 - shut immediately off all burners and any electrical heating element and isolate the appliance from the power supply.
 - do not touch the appliance surface.
 - do not use the appliance.
- ✓ **CAUTION:** The use of a gas cooking appliance results in the production of heat, moisture and products of combustion in the room in which it is installed.
- ✓ Ensure that the kitchen is well ventilated especially when the appliance is in use: keep natural ventilation holes open or install a mechanical ventilation device (mechanical extractor hood).
- ✓ Always use flat-bottomed cookware during cooking.
- ✓ Never use cookware with a diameter larger than the diameter of the cooking zone.
- ✓ This appliance shall be installed in accordance with the regulations in force and only used in a well ventilated space.
- ✓ Read the instructions before installing or using this appliance.
- ✓ **CAUTION:** The use of a hob guard is not permitted with this appliance. Do not attempt to fit or use a hob guard as this can cause accidents.

Gas connection

WARNING: The connection of the hob to the gas network or gas cylinder must be made by means of a rigid copper or steel pipe with fittings complying with local regulations. These fittings are NOT supplied. THIS OPERATION MUST BE MADE BY A QUALIFIED GAS INSTALLER.

A connecting elbow is pre-fitted to the hob. This elbow terminates in an external 1/2" BSP connecting thread complying with ISO 228-1:2003. The connection made to the pre-fitted elbow MUST be suitable for connecting to this thread. If ANY other connection type or thread size is used a suitable adaptor MUST be fitted.

The qualified gas installer must ensure that the operation of the burners has been correctly verified before use.

CAUTION: The gas connection must be installed in compliance with applicable regulations in the country of installation.

Gas supply requirements

The appliance installation must be carried out in accordance with relevant local regulations.

The installation must be carried out by an authorised gas appliance installer and tested to local regulations.

We are not legally able to offer advice on the installation of gas appliances to un-authorized personnel.

Ventilation

This appliance must not be connected to a combustion products evacuation device. It shall be connected and installed in accordance with local installation regulations paying particular attention to the relevant requirements regarding ventilation.

What to do if you smell gas?

Do not try to light any appliance.

Do not touch any electrical switch.

Do not use phones in the building.

Immediately call your gas supplier from a different property.



WARNING: Read the instructions before using the appliance.

THIS APPLIANCE MUST BE EARTHED.

THIS HOB MUST BE INSTALLED BY A QUALIFIED GAS TECHNICIAN!

Electrical connection

All installation must be carried out by a qualified electrician. Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate.

Direct Connection

The appliance must be connected directly to the mains using an omnipolar circuit breaker with a minimum opening of 3 mm between the contacts.

The installer must ensure that the correct electrical connection has been made and that it complies with the wiring diagram.

The cable must not be bent or compressed.

Regularly check the power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a safety hazard.


WARNING: This is a Class I appliance and MUST be earthed.

This appliance is supplied with a 3 core mains cable coloured as follows:

Brown = L or Live

Blue = N or Neutral

Green and Yellow = E or Earth \oplus

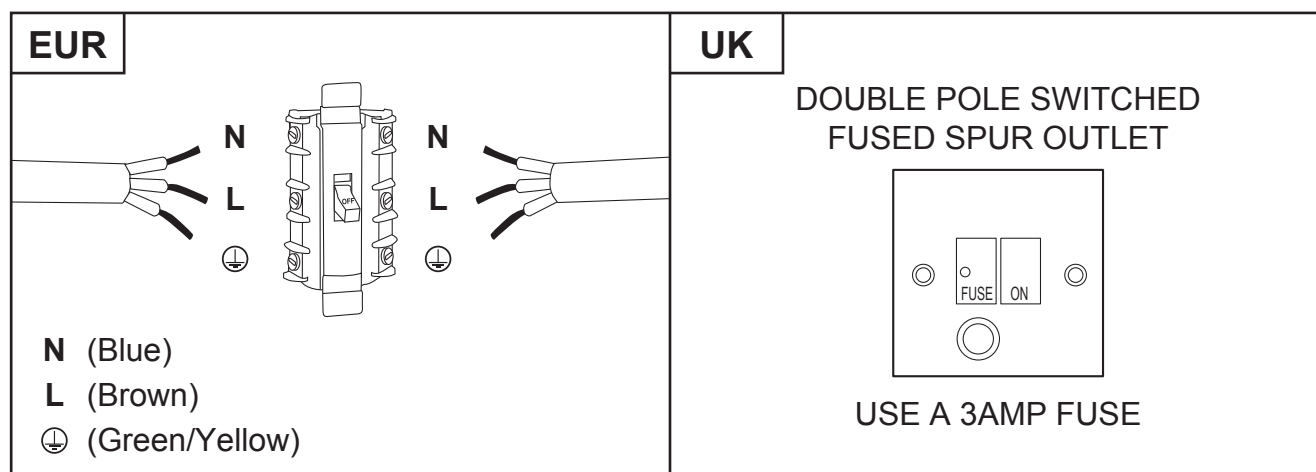

To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services.

The manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance. Any permanent electrical installation must comply with the latest wiring regulations applicable to your country and for your own safety a qualified electrician or contractor must undertake the electrical installation.

Technical data

Supply voltage	220-240V AC~50Hz
Gas pressure with supplied G20 jets	20 mbar
External dimensions (W x H x D)	590x523x95mm
Net weight	13.6kg
Destination	UK & Ireland

Injector Table


Gas Category UK & IR

I12H3+ (G20 20 mbar, G30 28-30 mbar, G31 37 mbar)

Type of gas used	Type of burner	Injector marking	Rated thermal flow rate kW	Rated consumption	Reduced heat capacity kW	Gas pressure rating (mbar)
NATURAL GAS (Methane) G20	Auxiliary	0.72mm	0.95	91 lt/h	0.28	20
	Semi Rapid	0.97mm	1.75	167 lt/h	0.45	
	Rapid	1.15mm	2.90	276 lt/h	0.75	
LIQUEFIED PETROLEUM GAS (Butane) G30	Auxiliary	0.50mm	0.90	65 g/h	0.25	28-30
	Semi Rapid	0.65mm	1.65	120 g/h	0.40	
	Rapid	0.85mm	2.90	211 g/h	0.80	

Type of gas used	Type of burner	Injector marking	Rated thermal flow rate kW	Rated consumption	Reduced heat capacity kW	Gas pressure rating (mbar)
LIQUEFIED PETROLEUM GAS (Propane) G31	Auxiliary	0.50mm	0.90	64 g/h	0.25	37
	Semi Rapid	0.65mm	1.65	118 g/h	0.40	
	Rapid	0.85mm	2.90	207 g/h	0.80	

Type of gas used	Model configuration 4 BURNERS	Rated thermal flowrate (kW)	Total rated consumption
G20 20 mbar	1AUX – 2SR – 1R	7.35	701 lt/h
G30 28-30 mbar	1AUX – 2SR – 1R	7.10	516 g/h
G31 37 mbar	1AUX – 2SR – 1R	7.10	507 g/h

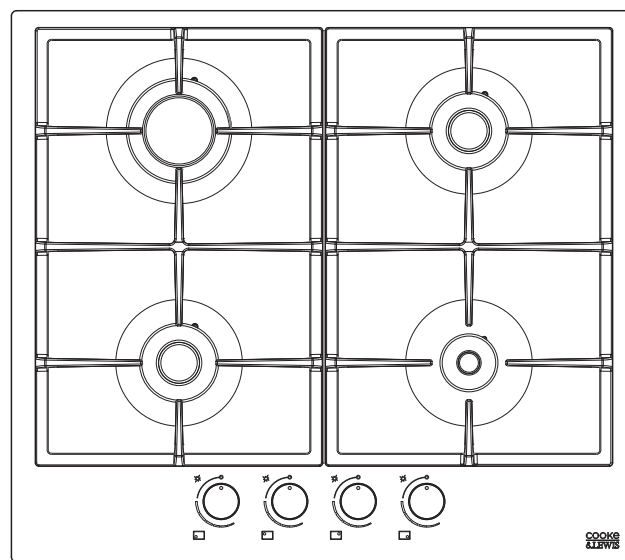

Burner	Minimum Pan Diameter (cm)	Maximum Pan Diameter (cm)
Auxiliary	≥10	≤18
Semi Rapid	≥14	≤24
Rapid	≥16	≤26

Energy efficiency

Product information according to EU 66/2014

Model Identification		CLGOGUIT4
Type of hob		Built-in hob
Number of gas burners		4
Energy efficiency per gas burner (EE gas burner)	Auxiliary	not applicable
	Semi-Rapid	62.0%
	Semi-Rapid	62.0%
	Rapid	62.0%
Energy efficiency for the gas hob (EE gas burner)		62.0%

EN 30-2-1: Domestic cooking appliances burning gas - Part 2-1: Rational use of energy - General

Troubleshooting

Problem

If your appliance has stopped working, please check the following before contacting customer services.

1. Check that the gas or electricity supply has not been switched off.
 2. Check that the fuse in the connection unit has not blown.
 3. Ensure that the burner components are not excessively soiled as this can lead to ignition problems.
- Do not take the appliance apart yourself, as you may damage the hob.

Commercial Guarantee

At Cooke and Lewis we take special care to select high quality materials and use manufacturing techniques that allow us to create ranges of products incorporating design and durability. That's why we offer a 24 months' guarantee against manufacturing defects on our 4 Burner Gas on Glass Hob.

This 4 Burner Gas on Glass Hob is guaranteed for 24 months from the date of purchase, if bought in store, or delivery, if bought online, for normal (non-professional or commercial) household use. You may only make a claim under this guarantee upon presentation of your sales receipt or purchase invoice. Please keep your proof of purchase in a safe place.

The guarantee covers all parts and labour costs associated with the repair of the 4 Burner Gas on Glass Hob if it is found to be defective due to faulty materials or workmanship within 24 months from the date of purchase or delivery subject to the exclusions set out below and provided it was used for the purpose for which it is intended and subject to installation, cleaning, care and maintenance in accordance with the information contained in the user manual. This guarantee does not cover defects and damage caused by normal wear and tear of 4 Burner Gas on Glass Hob and damage that could be the result of improper use, faulty installation, storage or assembly, neglect, accident, modification of the product, consumable items such as carbon filters and bulbs and any damage arising if the 4 Burner Gas on Glass Hob is not fitted by a properly qualified gas installer. The guarantee is limited to parts recognised as defective.

If the 4 Burner Gas on Glass Hob is defective, we will repair it. However, if, during the guarantee period, the 4 Burner Gas on Glass Hob becomes irreparable as agreed by an engineer approved by our authorised agent then we reserve the right, at our discretion, to exchange the defective 4 Burner Gas on Glass Hob with a replacement 4 Burner Gas on Glass Hob. If the same 4 Burner Gas on Glass Hob is no longer available an alternative 4 Burner Gas on Glass Hob will be offered with the equivalent functions and specifications.

During the service work carried out it may be necessary to remove the built in 4 Burner Gas on Glass Hob from its fitted position. If the 4 Burner Gas on Glass Hob is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the 4 Burner Gas on Glass Hob to facilitate the repair or replacement.

After the 4 Burner Gas on Glass Hob has been repaired or replaced any remaining balance of the guarantee period will apply to the repaired or replaced 4 Burner Gas on Glass Hob.

Should any person other than an engineer approved by our authorised agent modify or attempt to repair the 4 Burner Gas on Glass Hob then the guarantee will be invalid. This guarantee only applies to the country of purchase or delivery and is not transferable to any other countries. This guarantee is non-transferable to any other person or product. Relevant local law will apply to this guarantee. This guarantee is in addition to and does not affect your statutory rights relating to faulty goods as a consumer.

Guarantee related queries should be addressed to a store affiliated with the distributor you purchased the 4 Burner Gas on Glass Hob from.

To arrange a service call, please contact our customer services on one of the following Toll Free numbers, you must contact the number in the country in which you purchased the 4 Burner Gas on Glass Hob:

UK 0800 324 7818 uk@kingfisherservice.com

Eire 1800 932 230 eire@kingfisherservice.com

Distributor: B&Q plc, Chandlers Ford, Hants, SO53 3LE United Kingdom www.diy.com

SFD Limited, Trade House, Mead Avenue, Yeovil, BA22 8RT, United Kingdom

Recycling & disposal

Environmental protection Waste electrical products should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.



Manufacturer:

Kingfisher International Products Limited,
3 Sheldon Square, London, W2 6PX,
United Kingdom

Distributor:

B&Q plc, Chandlers Ford, Hants,
SO53 3LE United Kingdom www.diy.com
SFD Limited, Trade House, Mead Avenue,
Yeovil, BA22 8RT, United Kingdom

