



HT2375D Cutting unit

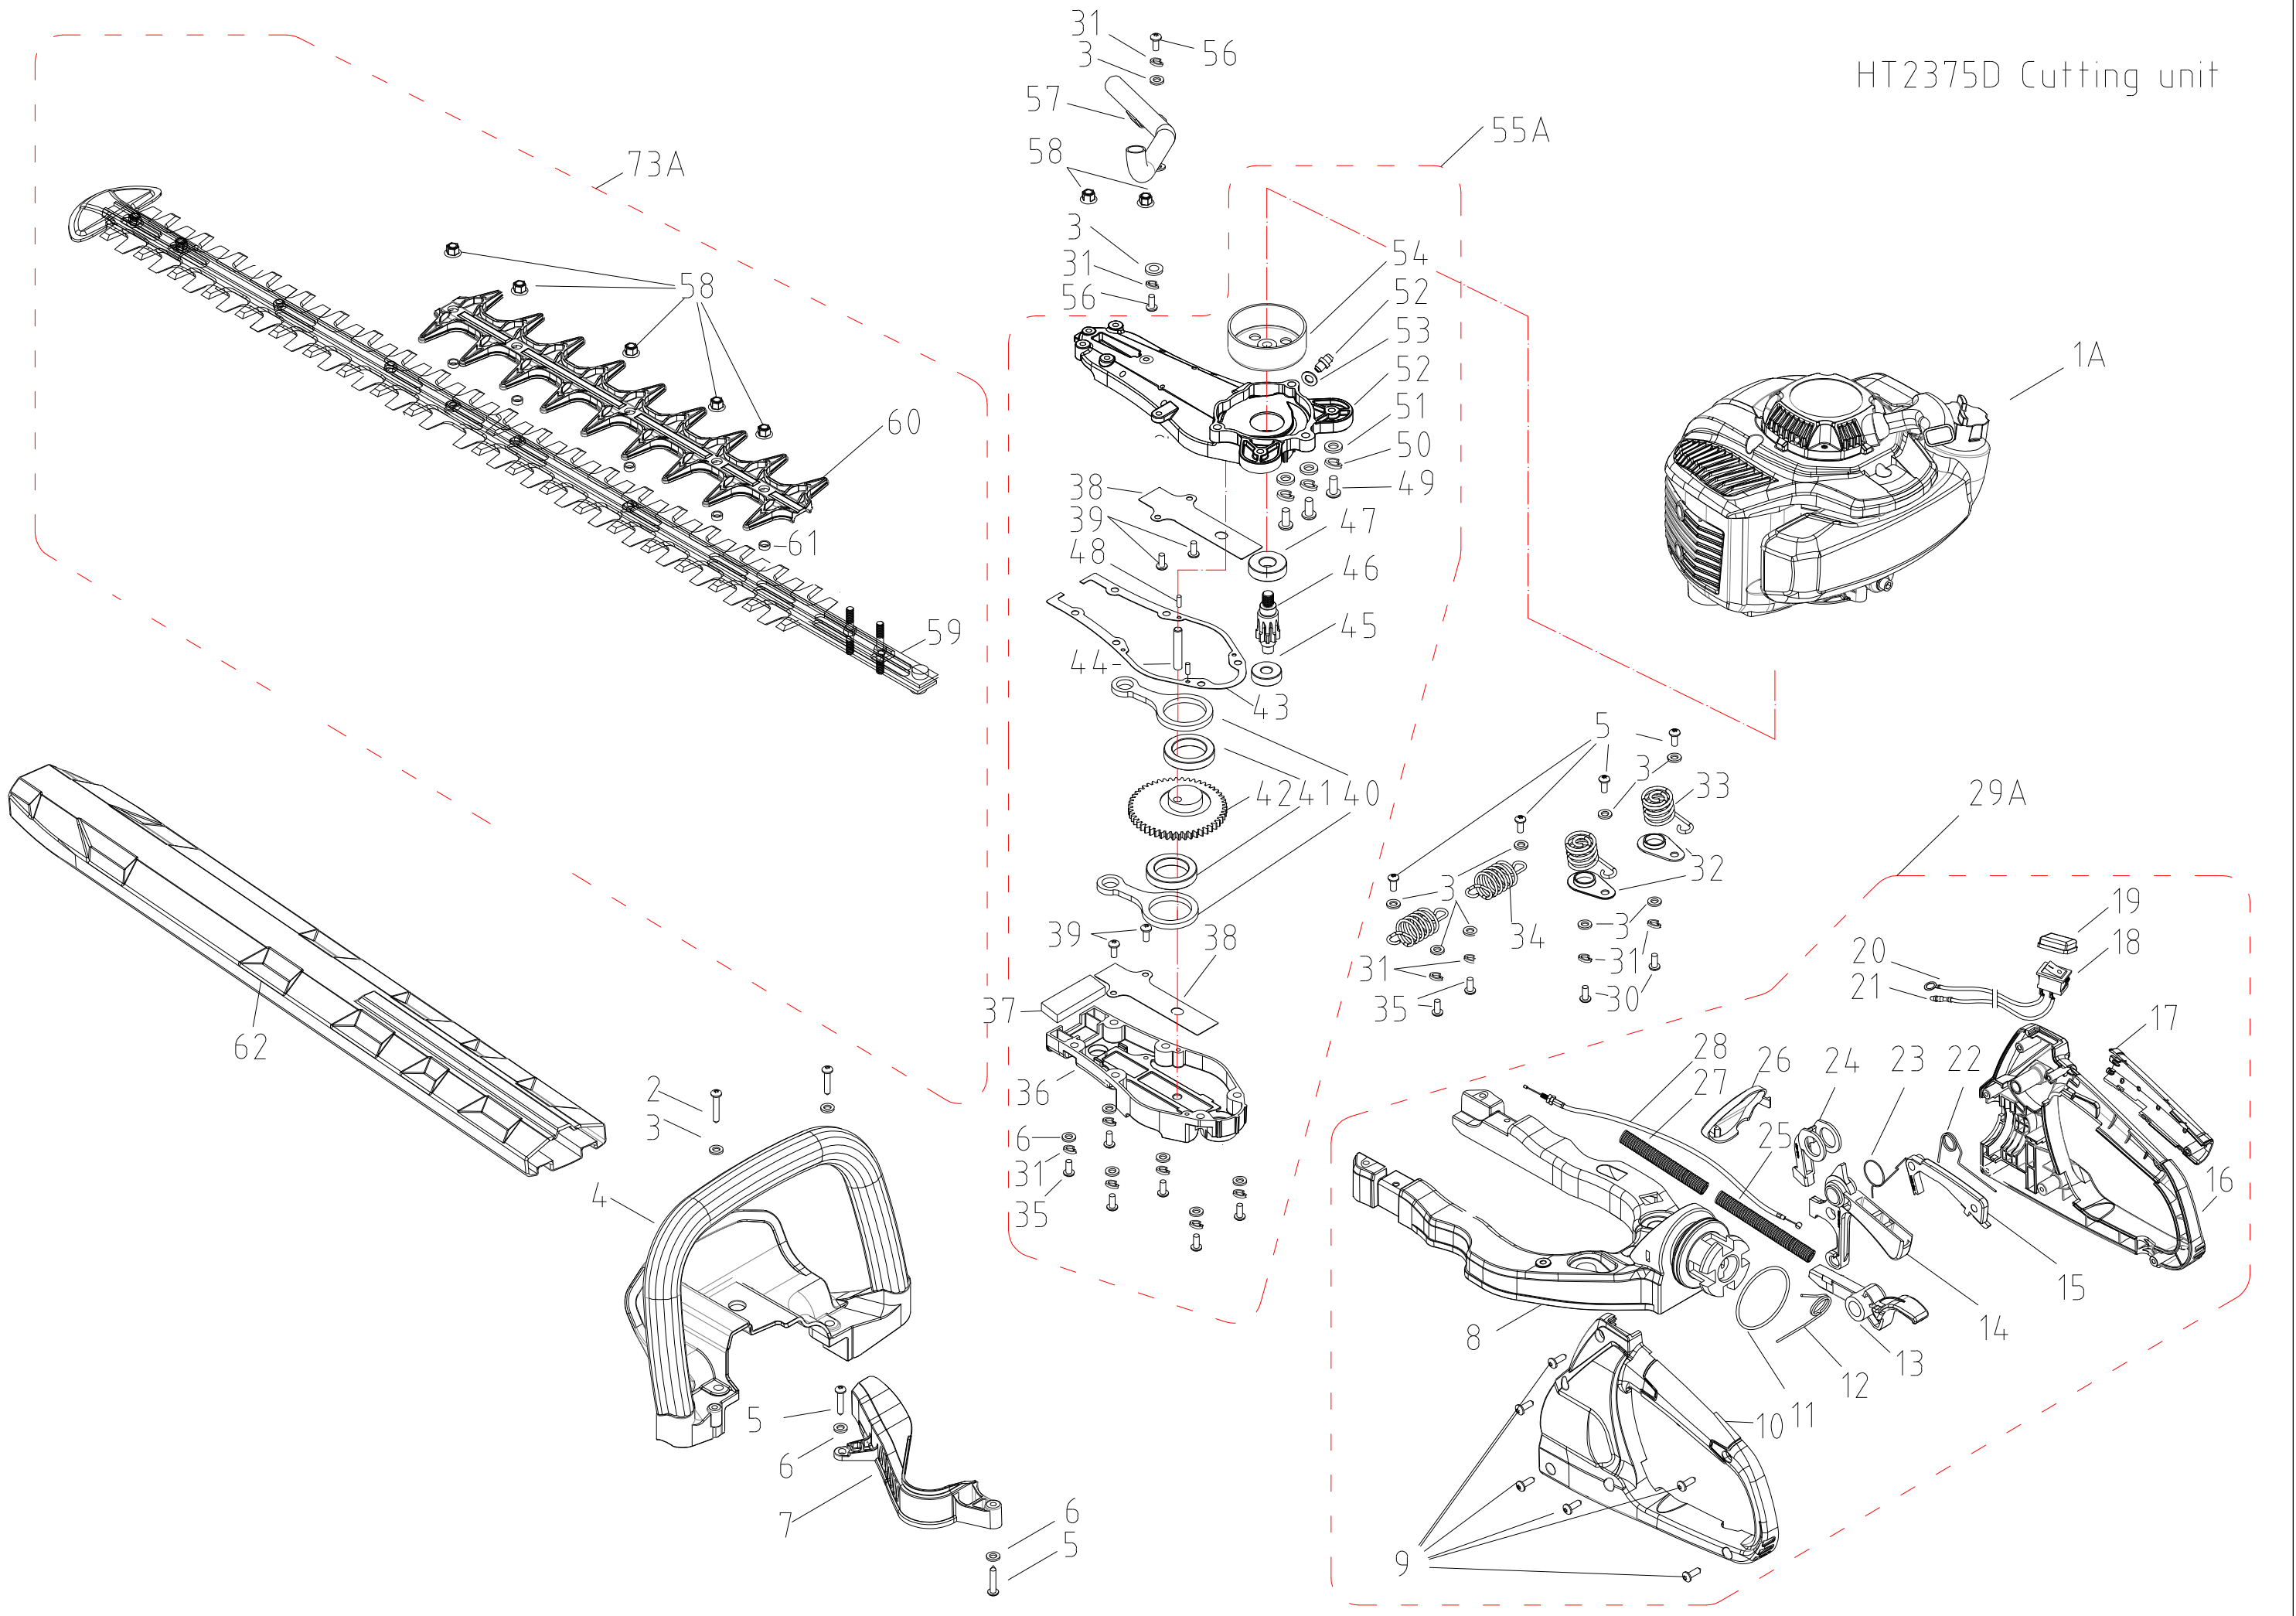

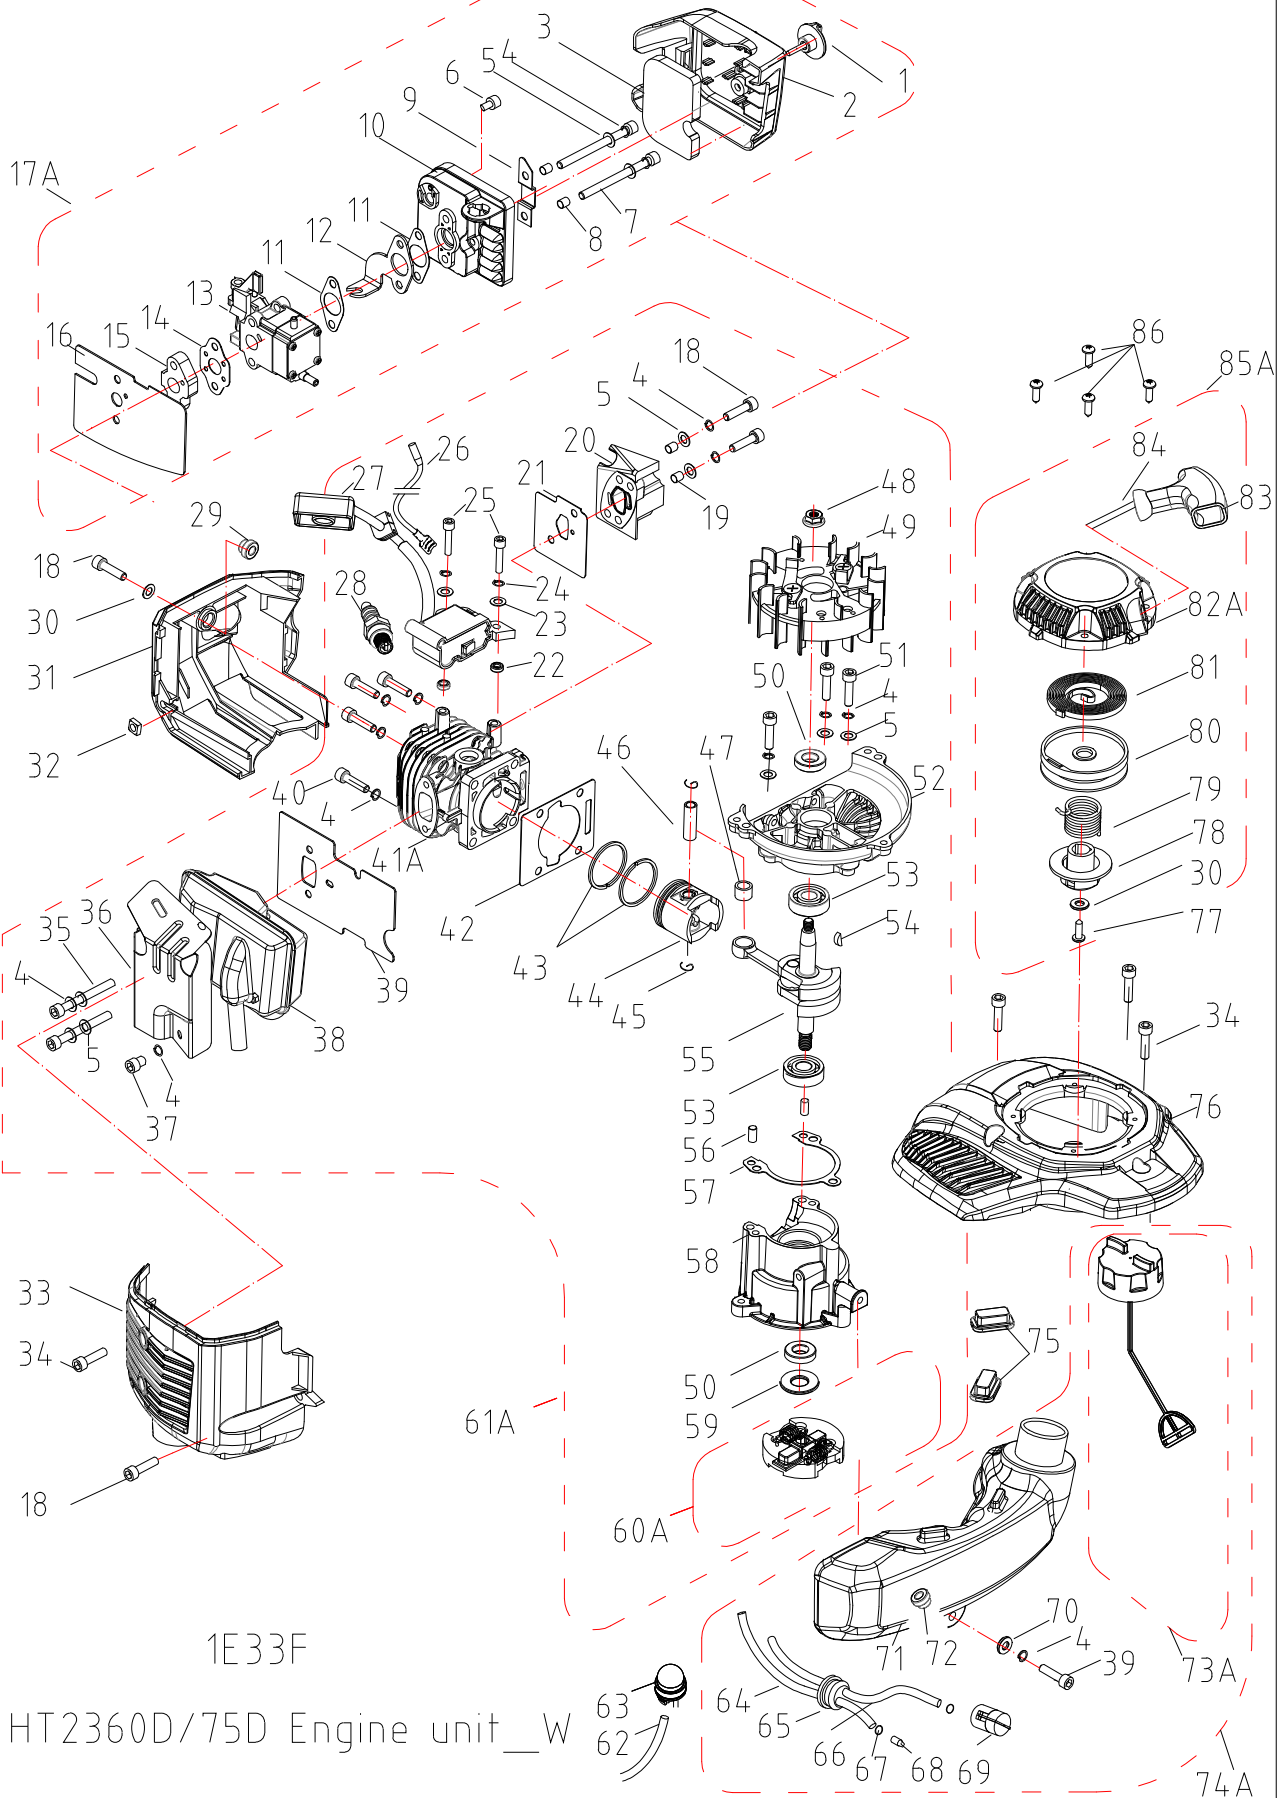

1E33F

HT2360D/75D Engine unit __W

Assembly ID	Part ID	MPN	Part Number	Description	QTY
HT2375D Cutting unit					
	1A	/		Engine	1
	2	01.01.3041	20060937	Tapping screw ST4.8x25	2
	3	01.04.0123	20062666	Washer 5x12x1.5	12
	4	B23.0100.0001	20070087	Front handle	1
	5	01.01.3202	20060977	Tapping screw ST5x19	6
	6	01.04.0121	20054561	Plate washer 5	8
	7	B23.0100.0010	20066764	Exhaust pipe cover	1
29A	8	B23.0100.0002	20066750	Base	1
	9	01.01.1731	20054542	Tapping screw ST4x14	6
	10	B23.0112.0002	20066835	Rear handle left cover	1
	11	B23.0100.0007	20057836	O-ring seal (43.8x3.1)	1
	12	B23.0112.0009	20057858	Return spring for rotation control lever	1
	13	B23.0112.0008	20066881	Rotation control lever	1
	14	B23.0112.0003	20066846	Throttle trigger	1
	15	B23.0112.0006	20066857	Throttle trigger lockout	1
	16	B23.0112.0001	20066827	Rear handle right cover	1
	17	B23.0112.0100	20066897	Grip skin	1
	18	02.05.86	20050386	Engine switch	1
	19	E58.0152.0005	20071498	Water resistant cap	1
	20	B23.0100.0400	20050873	Ground connecting wire	1
	21	B23.0100.0300	20050872	Switch connecting wire	1
	22	B23.0112.0007	20057857	Return spring for throttle trigger lockou	1
	23	B23.0112.0005	20057856	Return spring for throttle trigger	1
	24	B23.0112.0004	20066864	Position block	1
	25	B23.0100.0009`	20058153	Rear throttle cable tube	1
	26	B23.0100.0003	20066756	Cover	1
	27	B23.0100.0008`	20058153	Front throttle cable tube	1
	28	B23.0100.0200	20050142	Throttle cable	1
	30	01.01.3251	20060983	Screw M5x14	2
	31	01.04.0091	20054560	spring lock washer 5	2
	32	B23.0100.0006	20057835	Waher for spring	2
	33	B23.0100.0005`	20057834	Rear absorber spring	2
	34	B23.0100.0004`	20057833	Front absorber spring	2
	35	01.01.4251	20061024	Screw M5x18	1
	36	B23.0113.0002	20053512	Gear box cover	1
	37	B23.0113.0003	20050888	Felt	1
	38	B25.0113.0005	20058036	Washer plate	2
	39	01.01.3061	20054537	Screw M4x10	4
	40	B25.0113.0010	20058040	Connecting rod	2
	41	01.05.1410	20061623	Bearing 61805-2Z 25x37x7	2
	42	B25.0113.0006	20058037	Eccentric wheel	1
	43	B25.0113.0008	20050907	Sealing gasket	1
	44	01.05.0311	20061590	Pin 6x35	1

55A	45	01.05.1470	20061631	Bearing 608-2RS 8x22x7	1
	46	B23.0113.0004	20057859	Output shaft	1
	47	01.05.1400	20061619	Bearing 6001-2RS 12x28x8	1
	48	01.05.0161	20054568	Pin 3x9	2
	49	01.01.4251	20061024	Screw M6x22	3
	50	01.04.0091	20054560	Spring washer 6	3
	51	01.04.0121	20054561	Plate washer 6	4
	52	B23.0113.0001	20053509	Gear box	1
	53	B25.0113.0100	20062673	Oiling nozzle	1
	54	B23.0113.0100A	20057860	Clutch bowl	1
	6	01.04.0121	20054561	Plate washer 5	6
	31	01.04.0091	20054560	spring lock washer 5	6
	56	01.01.3301	20060990	Screw M5x12	2
	57	B23.0100.0600	20057837	Exhaust pipe	1
73A	58	01.03.0104	20061341	Metal lock nut M5	7
	59	B23.0214.0000	20081513	Blade assembly	1
	60	B23.0114.0011	20081509	Unsharpened plate	1
	61	B23.0114.0004	20057865	Busher 6x8x3	5
	62	B23.0200.0002	20057872	Blade cover	1

HT2360D/HT2375D Engine unit_W

17A	1	B23.0104.0200	20079919	Hand screw	1
	2	B23.0104.0001	20066797	Air filter cover	1
	3	B23.0104.0003	20057845	Air filter	1
	4	01.04.0091	20054560	spring lock washer 5	2
	5	01.04.0121	20054561	plain washer 5	2
	6	B23.0104.0004	20055535	Block	1
	7	01.01.2491	20061157	Screw M5x65	2
	8	B23.0101.0015	20057842	Bush 5x6.5x9	2
	9	B23.0101.0010	20057838	Lock plate	1
	10	B23.0104.0300	20079920	Air filter case	1
	11	B23.0101.0009	20050878	Gasket for air filter	2
	12	B23.0101.0004	20050143	Cable support frame	1
	13	06.08.02.35	20054922	Carburettor	1
	14	B25.0101.0006	20050897	Gasket for carburettor(25D)	1
	15	B23.0101.0016	20055533	Spacer plate	1
	16	B23.0101.0006	20050875	Gasket for carburettor	1
	18	01.01.4251	20061024	Screw M5x18	5
	19	B23.0101.0014	20057841	Bush 5x6.3x7	3
	20	B23.0101.0400	20070094	Intake pipe	1
	21	B23.0101.0005	20050874	Gasket for intake pipe	1
	22	A25.0101.0002	20050590	Washer for ignition coil	2
	23	01.04.0251	/	Plate washer 4	2
	24	01.04.0191	/	Spring washer 4	2
	25	01.01.1721	20061086	Screw M4x20	2
	26	B23.0106.0600	20050887	Flameout wire	1

61A	27	B23.0106.0200	20070100	Ignition coil	1
	28	B23.0106.0300	20050886	Spark plug	1
	29	B23.0101.0013	20057840	Bush for cylinder cover	1
	30	B25.0100.0013	20062666	Washer 5x12x1.5	1
	31	B23.0101.0002	20081514	Cylinder cover	1
	32	B23.0114.0010	20062662	Square nut M5	1
	33	B23.0101.0003	20081511	Muffler cover	1
	34	01.01.3251	20060983	Screw M5x14	4
	35	01.01.2371	20060897	Screw M5x50	2
	36	B23.0105.0301	20057848	Heat isolation	1
	37	01.01.1901	20060853	Screw M5x5	1
	38	B23.0105.0100	20070098	Muffler Assembly	1
	39	B23.0101.0007	20050876	Gasket for muffler	1
	40	01.01.2141	20054550	Screw M5x20	4
	41A	B23.0101.0300	20070093	Cylinder (Include end cap)	1
	42	B23.0101.0008	20050877	Gasket for cylinder	1
	43	B23.0103.0001B	20053504	Piston ring	2
	44	B23.0103.0200	20053506	Piston	1
	45	A36.0103.0003	20053071	Piston pin circlip	2
	46	B23.0103.0002	20053505	Piston pin	1
	47	B23.0103.0300	20062649	Pin screw 8x11x10	1
	48	01.03.0084	20061346	Nut M6	1
	49	B23.0106.0100	20050880	Magneto	1
	50	B25.0101.0600	20057984	Sealing 10x20x5	2
	51	01.01.2151	20061082	Screw M5x25	3
	52	B23.0102.0001	20053497	Top crankcase	1
	53	01.05.1390	20061612	Bearing 6000	2
	54	A45.0101.0036	20054650	Key	1
	55	B23.0103.0100	20070095	Crankshaft	1
	56	01.05.0071	20054566	Pin 5x10	2
	57	B23.0102.0003	20050879	Gasket for crankcase	1
	58	B23.0102.0002	20053500	Bottom crankcase	1
	59	B23.0101.0018	20057843	Clutch washer	1
	60A	A25.0101.0200	20056201	Clutch Assembly	2
4	01.04.0091	20054560	spring lock washer 5	12	
5	01.04.0121	20054561	plain washer 5	7	
74A	62	B23.0101.0012	20056635	Primer tube 2.5x5x75	1
	63	A38.0311.0100	20054581	Primer bulb	1
	64	B23.0111.0003	20054576	Return tube 2.5x5x100	1
	65	B25.0111.0001	20058019	Fuel tube seat	1
	66	B23.0111.0002	20056635	Fuel tube 2.5x5x230	1
	67	A25.0111.0009	20055055	Circlip	1
	68	A38.0314.0005	20056837	Fuel tube connection	1
	69	A38.0311.0600	20053109	Fuel filter	1
	70	01.04.0161	20054562	Washer 5	1

	71	B23.0111.0001	20079921	Fuel tank	1
	72	B23.0101.0017	20066796	Fuel tank Bush	1
	73A	B23.0111.0100		Fuel tank cap	1
	4	01.04.0091	20054560	spring lock washer 5	1
	75	B23.0101.0011	20057839	Fuel tank absorber	2
	76	B23.0101.0001	20081510	Top cover	1
85A(Part Number for assembly: 20074351)	77	01.01.3181	20054546	Screw M5x12	1
	78	B25.0310.0102	20067174	Ratchet wheel	1
	79	B25.0310.0103	20058065	Torque spring	1
	80	B25.0310.0101	20067173	Rope wheel	1
	81	C26.1110.0002	20058403	Strip spring	1
	82A	B23.0110.0100	20066818	Starter cover	1
	83	B23.0110.0300	20081523	Starter handle	1
	84	B25.0110.0103	20058011	Starter rope	1
	30	B25.0100.0013	20062666	Washer 5x12x1.5	1
	86	01.01.3121	20054542	Tapping screw ST4.2x14	4