**EN ORIGINAL INSTRUCTIONS**

IMPORTANT - These instructions are for your safety.
Please read through them thoroughly prior to handling
the product and retain them for future reference.

**V10323_3663602627258_MAND1_2223****EN Electric Tiller 1400W****MTIP1400-2**

3663602627258


3663602627272

TTB1400TI

5063022114082


5063022106247

EN Parts

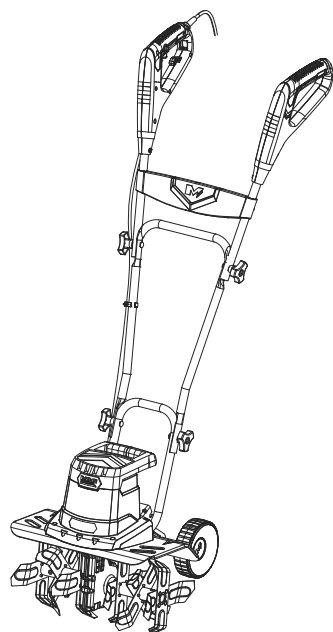


01. x1

EN You will need

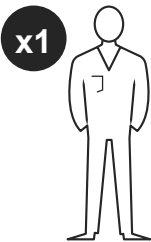

EN Contents

EN	
Product description	3
Safety	4
Technical specification	9
Before you start	10
Functions & Settings	13
Operation	14
Care and maintenance	15
Guarantee	19
Declaration of conformity	20

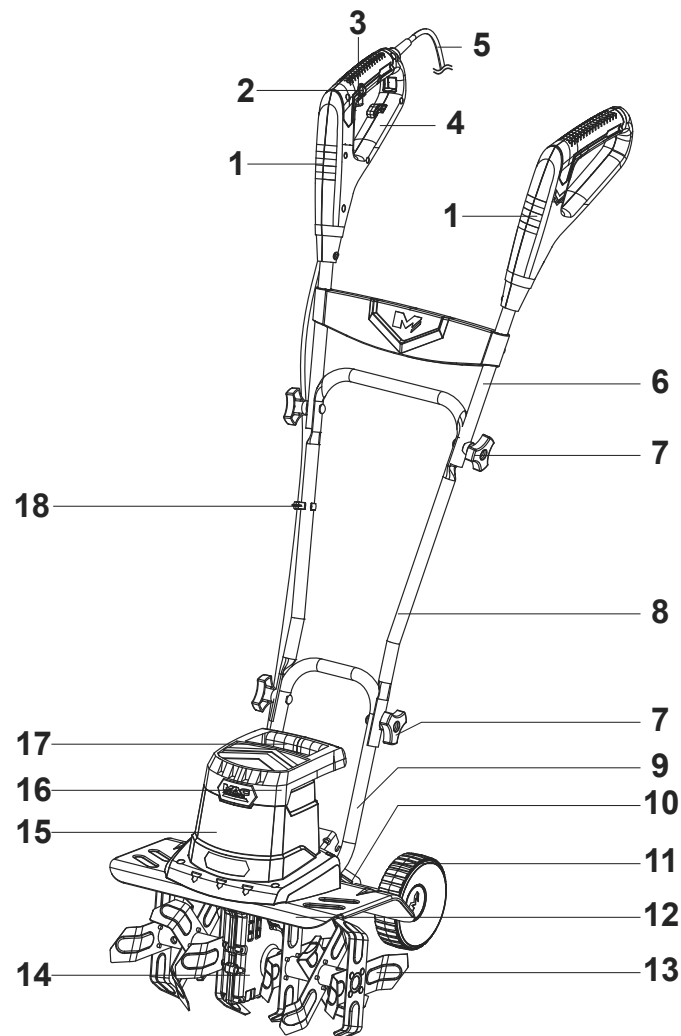

- | | |
|--------------------------|---------------------------|
| 1. Handle (left & right) | 8. Middle handle bar |
| 2. On/off switch | 9. Lower handle bar |
| 3. Lock-off button | 10. Wheel adjustment |
| 4. Safe guard | 11. Wheel |
| a. Cord retainer* | 12. Guard |
| 5. Power cord with plug | 13. Tines |
| 6. Upper handle bar | 14. Gearbox |
| 7. Mounting set (x4) | 15. Motor |
| a. Bolt* | 16. Air vents |
| b. Lever* | 17. Transportation handle |
| c. Washer* | 18. Cord clip |



NOTE: Parts marked with * are not shown in this overview. Please refer to the respective section in the instruction manual.



EN Safety



IMPORTANT

**READ CAREFULLY BEFORE USE.
KEEP FOR FUTURE REFERENCE.**

Training

1. Read the instructions carefully. Be familiar with the controls and the proper use of the product.
2. Never allow children or people unfamiliar with these instructions to use the product. Local regulations can restrict the age of the operator.
3. Never work while people, especially children, or pets are nearby.
4. Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.

Preparation

1. Always wear substantial footwear and long trousers while working. Do not operate the product when barefoot or wearing open sandals.
2. Thoroughly inspect the area where the product is to be used and remove all objects which can be thrown by the product.
3. Before using, always visually inspect to see that the cutting devices, cutting device bolts and cutter assembly are not worn or damaged. Replace worn or damaged cutting devices and bolts in sets to preserve balance.
4. On multi-bladed machines, take care as rotating one cutting device can cause other cutting devices to rotate.



CAUTION! Do not touch rotating cutting device.

Operation

1. Work only in daylight or in good artificial light.
2. Always be sure of your footing on slopes.

3. Walk, never run with the product.
4. Work across the slopes, never up and down.
5. Exercise extreme caution when changing direction on slopes.
6. Do not work on excessively steep slopes.
7. Use extreme caution when reversing or pulling the product towards you.
8. Start the motor carefully according to manufacturer instructions and with feet well away from the tool(s).
9. Do not put your hands or feet near or under rotating parts.
10. Never pick up or carry a product while the motor is running.
11. Never operate the appliance with defective guards or shields, or without safety devices, for example deflectors and/or catchers in place.
12. Stop the machine, and disconnect it from the power supply. Make sure that all moving parts have come to a complete stop
 - before clearing blockages or unclogging chute,
 - before checking, cleaning or working on the machine,
 - after striking a foreign object. Inspect the machine for damage and make repairs before restarting and operating the machine;
 - whenever you leave the machine,
13. If the machine starts to vibrate abnormally (check immediately)
 - inspect for damage,
 - check for and tighten any loose parts.
 - replace or repair any damaged parts,

Maintenance and storage

1. Follow the maintenance and repair instructions for this product. Never carry out any modifications of the product. Information about maintenance and repair is provided in this user manual.
2. Keep all nuts, bolts and screws tight to ensure the product is in safe working condition.
3. Replace worn or damaged parts for safety.
4. Make sure that air circulation is adequate and good. The product must be easily accessible from all sides.

5. During transportation of the product, the operator must control the handles by two hands.

Vibration and noise reduction

To reduce the impact of noise and vibration emission, limit the time of operation, use low- vibration and low-noise operating modes as well as wear personal protective equipment. Take the following points into account to minimise the vibration and noise exposure risks:

1. Only use the product as intended by its design and these instructions.
2. Ensure that the product is in good condition and well maintained.
3. Use correct cutting device for the product and ensure they in good condition.
4. Keep tight grip on the handles/gripping surface.
5. Maintain this product in accordance with these instructions and keep it well lubricated (where appropriate).
6. Plan your work schedule to spread any high vibration tool use across a longer period of time.

Emergency

Familiarise yourself with the use of this product by means of this instruction manual. Memorise the safety directions and follow them to the letter. This will help to prevent risks and hazards.

1. Always be alert when using this product, so that you can recognise and handle risks early. Fast intervention can prevent serious injury and damage to property.
2. Switch off and disconnect from the power supply if there are malfunctions. Have the product checked by a qualified professional and repaired, if necessary, before you operate it again.

Residual risks

Even if you are operating this product in accordance with all the safety requirements, potential risks of injury and damage remain. The following dangers can arise in connection with the structure and design of this product:

- 1. Health defects resulting from vibration emission if the product is being used over long periods of time or not adequately managed and properly maintained.
- 2. Injuries and damage to property due to broken application tools or the sudden impact of hidden objects during use.
- 3. Danger of injury and property damage caused by flying objects.



WARNING! This product produces an electromagnetic field during operation! This field may under some circumstances interfere with active or passive medical implants! To reduce the risk of serious or fatal injury, we recommend persons with medical implants to consult their doctor and the medical implant manufacturer before operating this product!

Symbol

On the product, the rating label and within these instructions you will find among others the following symbols and abbreviations. Familiarise yourself with them to reduce hazards like personal injuries and damage to property.

V~	Volt, (alternating voltage)	mm	Millimetre
Hz	Hertz	kg	Kilogram
W	Watt	dB(A)	Decibel (A-rated)
/min or min ⁻¹	Per minute	m/s ²	Metres per second squared



Lock / to tighten or secure.



Unlock / to loosen.



Note / Remark.



Caution / Warning.



Read the instruction manual.



Wear hearing protection.



Wear eye protection.



Wear a dust mask.



Wear protective gloves.



Wear protective, slip-resistant footwear.



Wear tight-fitted protective clothes.

yyWxx

Manufacturing date code; year of manufacturing (20yy) and week of manufacturing (Wxx).



Switch the product off and disconnect it from the power supply before assembly, cleaning, adjustments, maintenance, storage and transportation.



Do not expose the product to rain or wet conditions (moisture).



Work across the slopes, never up and down.



Inspect the area where the product is to be used and remove all objects which can be thrown by the product. If objects are hidden while operating stop the engine and remove the object.



Objects thrown by the product could hit the user or other bystanders. Always ensure that other people and pets remain at a safe distance from the product when it is in operation. In general, children must not come near the area where the product is.



Keep supply flexible cord away from cutting device.



Cutting device continues to rotate after the product is switched off. Wait until all machine components have completely stopped before touching the product.



Pay special attention when working on the cutting device!



Keep hands and feet away from sharp rotating parts – danger of injury! When cleaning, repairing, or inspecting, make certain the working tool and all moving parts have stopped.



Guaranteed sound power level value in dB.



This product is of protection class II. That means it is equipped with enhanced or double insulation.



WEEE symbol. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.



The product complies with the applicable European directives and an evaluation method of conformity for these directives was done.



UK Conformity Assessed.

IPX4

Protection against solid foreign bodies and against water Splash in all directions.

Rating label explanation

MTIP1400-2


M = MacAllister

TI = Tiller

P = Power

EN Technical specifications

General

> Rated voltage, frequency	: 220 - 240 V~ , 50 Hz
> Rated power input	: 1400 W
> Rated no load speed n_0	: 360 min ⁻¹
> Protection class	: II / 
> Tilling width	: 400 mm (6 times Ø 200 mm)
> Weight	: approx. 13 kg
> Dimensions	: approx. 1400 x 1000 x 430 mm

Sound values

> Sound pressure level L_{pA}	: 75.2 dB(A)
> Uncertainty K_{pA}	: 2.5 dB(A)
> Measured sound power level L_{WA}	: 87.2 dB(A)
> Uncertainty K_{WA}	: 2.5 dB(A)
> Guaranteed sound power level L_{WA}	: 93 dB(A)

Hand arm vibration values

> Hand arm vibration a_h	: 0.531 m/s ²
> Uncertainty K	: 1.5 m/s ²

The sound values have been determined according to noise test code given in EN 1553:1996, using the basic standards EN ISO 3744 and EN ISO 11094.

The sound intensity level for the operator may exceed 80 dB(A) and ear protection measures are necessary.

The declared vibration value has been measured in accordance with a standard test method (according to EN 709) and may be used for comparing one product with another. The declared vibration value may also be used in a preliminary assessment of exposure.



WARNING! Depending on the actual use of the product the vibration values can differ from the declared total. Adopt proper measures to protect yourself against vibration exposures. Take the whole work process including times the product is running under no load or switched off into consideration.

Proper measures include among others regular maintenance and care of the product and accessories, keeping hands warm, periodical breaks and proper planning of work processes.

EN Before you start

Unpacking

1. Unpack all parts and lay them on a flat, stable surface.
2. Remove all packing materials and shipping devices, if applicable.
3. Make sure the delivery contents are complete and free of any damage. If you find that parts are missing or show damage do not use the product but contact your dealer. Using an incomplete or damaged product represents a hazard to people and property.
4. Ensure that you have all the accessories and tools needed for assembly and operation. This also includes suitable personal protective equipment.



WARNING! The product and the packaging are not children's toys! Children must not play with plastic bags, sheets and small parts! There is a danger of choking and suffocation!

You will need

(items not supplied)

Suitable personal protective equipment

Assembly



WARNING! The product must be fully assembled before operation! Do not use a product that is only partly assembled or assembled with damaged parts!



Follow the assembly instructions step-by-step and use the pictures provided as a visual guide to easily assemble the product!

Do not connect the product to power supply before it is completely assembled!



NOTE: Take care of small parts that are removed during assembly or when making adjustments. Keep them secure to avoid loss.

Handle bar

1. Remove the bolts (7a) from the levers (7b) & washers (7c) and keep them handy.
2. Align the holes in the middle handle bar (8) with the holes in the lower handle bar (9) and secure the connection with the bolts (7a) and levers (7b) & washers (7c) (Fig. 1).

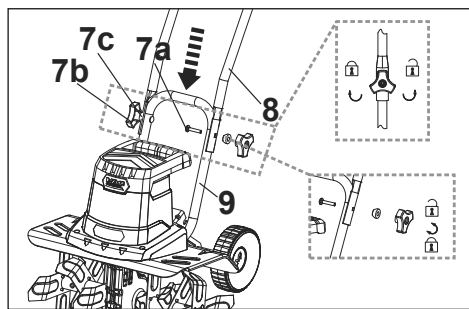


Fig. 1

3. Align the holes in the upper handle bar (6) with the holes in the middle handle bar (8) and secure the connection with the bolts (7a) and levers (7b) & washers (7c) (Fig. 2).

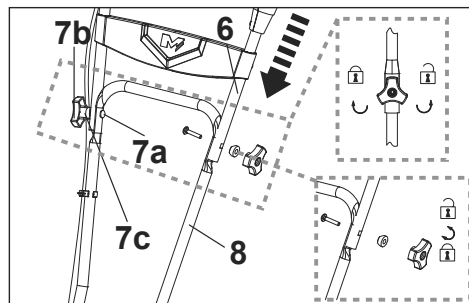


Fig. 2

4. Fix the cord in the cord clip (18) (Fig. 3).

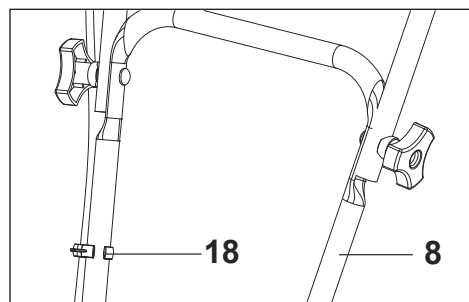


Fig. 3



WARNING! Make sure the levers (7a) are properly tightened before using the product.

Connection to the power supply (for UK only)



WARNING! Always use a residual current supply (RCD) protected supply. If an extension cord is used, make sure the extension cord is specifically designed for outdoor use and not lighter than H05VV-F or H05RN-F, 2x1.0mm² and max. 75m.

1. Make sure the on/off switch (2) is in its off position.
2. Correct the power plug to a suitable power source.
3. Now your product is ready for use.

Connection to power supply (not for UK)

For safety reasons the product is equipped with a short power cord (5). Do not connect the product directly to the power supply using this power cord. A proper extension cord is required for operation. Observe the technical requirements for this product when purchasing an extension cord.



WARNING! For your safety, it is required that the plug attached to this product is always connected to an extension cord! The extension cord must be suitable for outdoor use with sockets protected against water splashing! Ensure the extension cord is of the proper size and type for your product ($\geq 1.0 \text{ mm}^2$)!

Always use a residual current supply (RCD) protected supply

1. Double the extension cord back, about 30 cm from the end and lead the loop through the hole on the guard (4). Pull it over the cord retainer (4a) and gently tug on the cord to ensure that it is firmly secured (Figs. 4, 5).

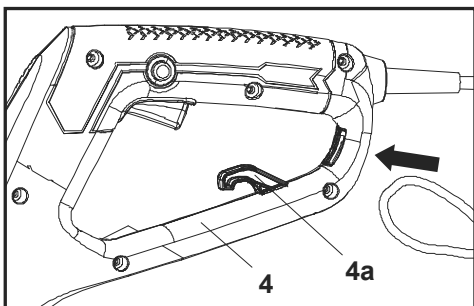


Fig. 4

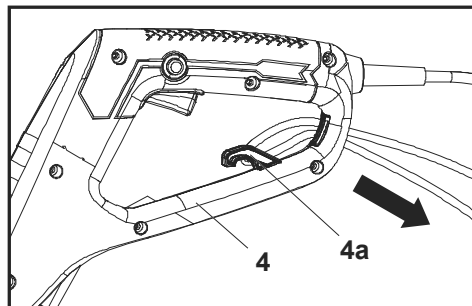


Fig. 5

2. Make sure the on/off switch (2) is not squeezed.
3. Connect the plug of the power cord to the socket on the extension cord. Then connect the plug of the extension cable to a suitable socket



WARNING! Check the voltage! The voltage must comply with the information on the rating label!

4. Your product is now ready to be used.

Intended use

This Electric Tiller MTIP1400-2 is designated with a rated power input of 1400 Watts.

This product is intended for loosening and working up the soil in a garden and for tilling coarse soil for mixing in fertilizer, peat and compost in domestic areas. This product may not be used to till extremely dry or wet soil.

The use of this product in case of rain or humid environment is prohibited.

For safety reasons it is essential to read the entire instruction manual before first operation and to observe all the instructions therein. This product is intended for private domestic use only, not for any commercial trade use. It must not be used for any purposes other than those described.

Wheel adjustment



WARNING! Always switch the product off and disconnect it from power supply before making any adjustments!

The wheels can be adjusted to 3 positions.

1. Pull on the wheel (11) and move it to required position, let go of the wheel and make sure it locks in position (Figs. 6-8).

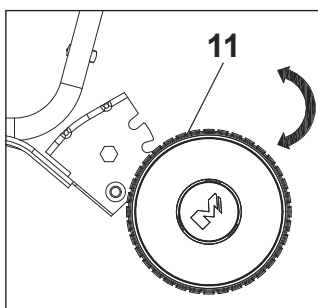


Fig. 6
Transport Position

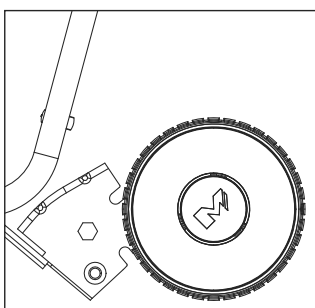


Fig. 7
Working position (low)

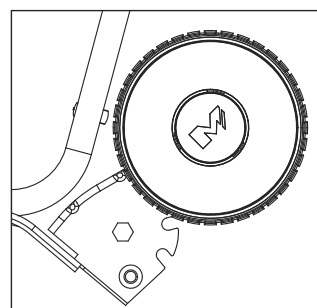


Fig. 8
Working position (High)



WARNING! The wheels can be adjusted in 3 different positions. Always ensure the wheels are securely locked! Do not attempt to use the product with the wheels in any other position or unlocked!

Switching on/off

1. Press the lock-off button (3) and hold it in position (Fig. 9, step 1).
2. Squeeze the on/off switch (2) to switch the product on (Fig. 9, step 2), release the lock-off button (3) afterwards.
3. Release the on/off switch (2) to switch the product off.

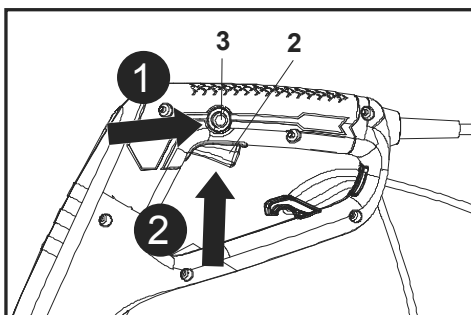


Fig. 9
13

General operation

1. Check the product, its power cord and plug as well as accessories for damage before each use. Do not use the product if it is damaged or shows wear.
2. Double check that the accessories and attachments are properly fixed.
3. Always hold the product on its handles. Keep the handles dry to ensure safe support.
4. Ensure that the air vents are always unobstructed and clear. Clean them if necessary with a soft brush. Blocked air vents may lead to overheating and damage the product.
5. Switch the product off immediately if you are disturbed while working by other people entering the working area. Always let the product come to complete stop before averting.
6. Do not overwork yourself. Take regular breaks to ensure you can concentrate on the work and have full control over the product.



WARNING! In some countries regulations define at what time of the day and on what special days products are allowed to be used and what restrictions apply! Ask your community for detailed information and observe the regulations in order to preserve a peaceful neighbourhood and avoid committing administrative offences!

Tilling

1. Make sure that the working area is clear of stones, sticks, wire or other objects that could damage the product or its engine.
2. Do not till very wet soil because it tends to stick to the working tool preventing the proper rotation, and it could also cause you to slip and fall.
3. Always maintain a firm grip on the product. For better guidance apply light pressure to the handles (1) (Fig. 10).



WARNING! Never carry this product as the person in Fig. 11 is doing. If you do, and the tines engage, you could suffer serious injury.

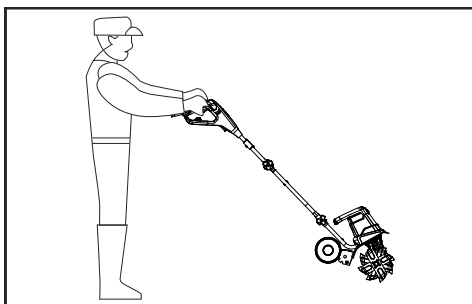


Fig. 10

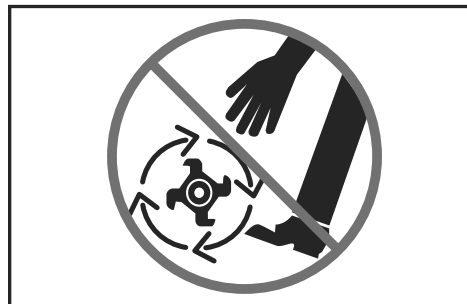


Fig. 11

4. Do not try to till too deeply or force the product into soil that is extremely hard or resistant.
5. Walk the product through the soil at a normal pace and in as straight a line as possible.
6. Till in slight overlapping rows. The most effective pattern for tilling soils is moving the product up and down in vertical lines, then move the product in horizontal lines from left to right (Fig. 12) This will keep the rows even and ensures that all the ground is tilled without missing any spots.

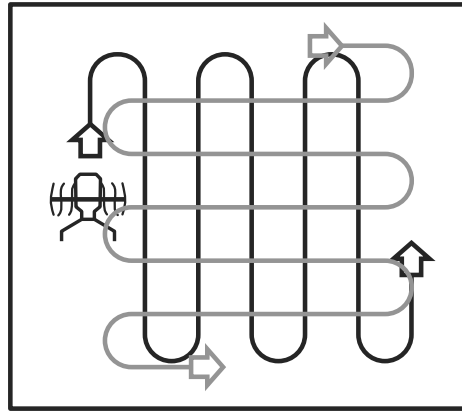


Fig. 12

7. Pay special attention when changing direction. Apply light pressure onto the handle (1) so that the tines (13) are lifted to make a turn. Turn the product around guided by the wheels (11). Gradually release pressure and move the tines (13) back to the ground.



WARNING! Stop the motor, if the product strikes a foreign object! Switch the product off, disconnect it from the power supply and let it cool down. Inspect the product thoroughly for damage! Have any damage repaired before restarting!



Extensive vibration of the product during operation is an indication of damage! Stop the motor. The product should be promptly inspected and repaired!



After use

1. Switch the product off, disconnect it from the power supply and let it cool down.
2. Check, clean and store the product as described below.

EN Care and maintenance

The golden rules for care



WARNING! Always switch the product off, disconnect the product from the power supply and let the product cool down before performing inspection, maintenance and cleaning work!

1. Keep the product clean. Remove debris from it after each use and before storage.
2. Regular and proper cleaning will help ensure safe use and prolong the life of the product.
3. Inspect the product before each use for worn and damaged parts. Do not operate it if you find broken and worn parts.



WARNING! Only perform repairs and maintenance work according to these instructions! All further works must be performed by a qualified specialist!

General cleaning

1. Clean the product with a dry cloth. Use a brush for areas that are hard to reach.
2. In particular clean the air vents (16) after every use with a cloth and brush.

3. Remove stubborn dirt with high pressure air (max. 3 bar).



NOTE: Do not use chemical, alkaline, abrasive or other aggressive detergents or disinfectants to clean this product as they might be harmful to its surfaces.

4. Check for worn or damaged parts. Replace worn parts as necessary or contact an authorised service centre for repair before using the product again.

Underbody and working tool



WARNING! Wear safety gloves when working on the working tool and close to it! Use proper tools to remove debris, e. g. a wooden stick!
Never use your bare hands!

1. Keep the underbody and tines (13) clean and free of debris. Remove soil from the working tool with a proper brush or tool.
2. All nuts and bolts must be checked periodically for tightness before operation. After prolonged use, especially in sandy soil conditions, the working tool will become worn and lose some of the original shape. Tilling efficiently will be reduced and the working tool should be replaced.
3. Have worn or damaged working tool replaced with new ones of the same type by a qualified specialist.
4. To prolong the life span of working tool and the product it is recommended that the tines (13) are lubricated after each use.

Maintenance

Before and after each use, check the product and accessories (or attachments) for wear and damage. If required, exchange them for new ones as described in this instruction manual. Observe the technical requirements.

Power cord

If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a safety hazard.

Spare parts/Replacement parts

The following parts of this product may be replaced by the consumer. Spare parts are available at an authorised dealer or through our customer service.

Description	Model no. or Specification
Tine	8440-560301
Bolt	8440-560302

Plug replacement (for UK only)

If you need to replace the fitted plug, then follow the instructions below.




IMPORTANT: The wires in the mains lead are coloured in accordance with the following code:

Blue - Neutral

Brown - Live

As the colours of the wire in the mains lead of this product may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows. The wire, which is coloured blue, must be connected to the terminal, which is marked with N or coloured black. The wire, which is coloured brown, must be connected to the terminal, which is marked L or coloured red.

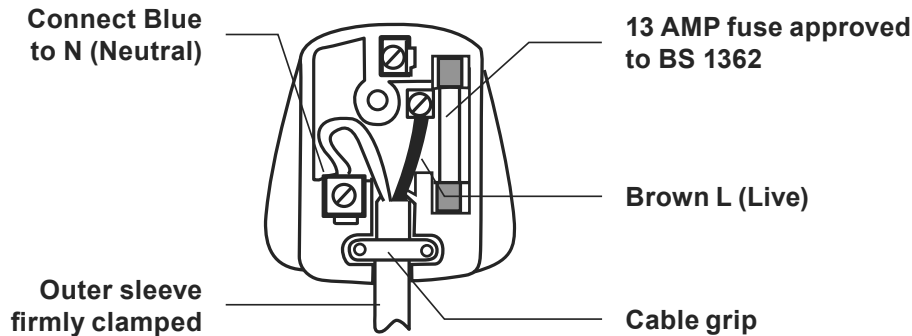

WARNING! Never connect live or neutral wires to the earth terminal of the plug, which is marked with E.

Only fit an approved 13 Amp BS 1363 or BS 1363/A plug and the correctly rated fuse. If in doubt, consult a qualified electrician.



NOTE: If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent engaging into a socket.

Repair

This product does not contain any parts that can be repaired by the consumer. Contact an authorised service centre or a similarly qualified person to have it checked and repaired.

Storage

1. Switch the product off and disconnect it from the power supply.
2. Clean the product as described above.
3. Store the product and its accessories in a dark, dry, frost-free, well-ventilated place.
4. Always store the product in a place that is inaccessible to children. The ideal storage temperature is between 10°C and 30°C.
5. We recommend using the original package for storage or covering the product with a suitable cloth or enclosure to protect it against dust.

Transportation

1. Switch the product off and disconnect it from the power supply.
2. Attach transportation guards, if applicable.
3. Always carry the product by its transportation handle (17).
4. Protect the product from any heavy impact or strong vibrations which may occur during transportation in vehicles.
5. Secure the product to prevent it from slipping or falling over.

Troubleshooting

Suspected malfunctions are often due to causes that the users can fix themselves. Therefore check the product using this section. In most cases the problem can be solved quickly.



WARNING! Only perform the steps described within these instructions! All further inspection, maintenance and repair work must be performed by an authorised service centre or a similarly qualified specialist if you cannot solve the problem yourself!

Problem	Possible cause	Solution
1. Product does not start	1.1. Not connected to power supply 1.2. Power cord or plug is defective 1.3. Other electrical defect to the product	1.1. Connect to power supply 1.2. Check by a specialist electrician 1.3. Check by a specialist electrician
2. Product does not reach full power	2.1. Power source (e.g. generator) has too low voltage 2.2. Air vents are blocked	2.1. Connect to another power source 2.2. Clean the air vents
3. Unsatisfactory result	3.1. Tines are dull/ damaged 3.2. Tines not suitable for ground material	3.1. Replace with new one 3.2. Use product only on suitable ground
4. Excessive vibration or noise	4.1. Tines are dull/ damaged 4.2. Bolts/nuts are loose	4.1. Replace with new ones 4.2. Tighten bolts/nuts

Recycling and disposal



The product comes in a package that protects it against damage during shipping. Keep the package until you are sure that all parts have been delivered and the product is function properly. Recycle the package afterwards.

WEEE symbol. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.

EN Guarantee

We take special care to select high quality materials and use manufacturing techniques that allow us to create products incorporating design and durability. This product has a manufacturer's guarantee of 2 years against manufacturing defects, from the date of purchase (if bought in store) or date of delivery (if bought online), at no additional cost for normal (non-professional or commercial) household use.

To make a claim under this guarantee, you must present your proof of purchase (such as a sales receipt, purchase invoice or other evidence admissible under applicable law), please keep your proof of purchase in a safe place. For this guarantee to apply, the product you purchased must be new, it will not apply to second hand or display products. Unless stated otherwise by applicable law, any replacement product issued under this guarantee will only be guaranteed until expiry of the original period guarantee period.

This guarantee covers product failures and malfunctions provided the product was used for the purpose for which it is intended and subject to installation, cleaning, care and maintenance in accordance with the information contained in these terms and conditions, in the user manual and standard practice, provided that standard practice does not conflict with the user manual.

This guarantee does not cover defects and damage caused by normal wear and tear or damage that could be the result of improper use, faulty installation or assembly, neglect, accident, misuse, or modification of the product. Unless stated otherwise by applicable law, this guarantee will not cover, in any case, ancillary costs (shipping, movement, costs of uninstalling and reinstalling, labour etc), or direct and indirect damage.

This guarantee does not cover defects and damage caused by or resulting from:

- Normal wear and tear
- Overload, misuse or neglect
- Repairs attempted by anyone other than an authorised agent
- Cosmetic damage
- Damage caused by foreign objects, substances or accidents
- Accidental damage or modification
- Failure to follow manufacturer's guidelines
- Loss of use of the goods

If the product is defective, we will, within a reasonable time repair, replace or provide spare parts.

Rights under this guarantee are enforceable in the country in which you purchased this product. Guarantee related queries should be addressed to the store you purchased this product from.

The guarantee is in addition to and does not affect your statutory rights.




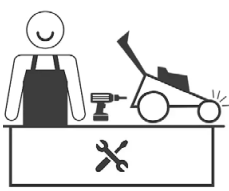
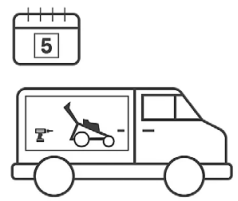
**IMPORTANT - RETAIN THIS INFORMATION
FOR FUTURE REFERENCE:
READ CAREFULLY**

Customer care and technical helpline

A better way to repair your tools

Kingfisher takes special care in creating high-quality garden power tools that are designed to last. But if a fault develops with your garden power tool and you need to claim under the guarantee, the Customer Care and Technical Helpline can support with technical assistance or if required, arrange a free courier collection from your home, assess your garden power tool for fault, repair it, and return it.

Deciding to repair your product rather than buying a replacement and adding to the mountain of waste is a more sustainable choice and you will be doing your bit for the environment.

How does it work?				
				
Step 1	Step 2	Step 3	Step 4	Step 5
Find your proof of purchase and get in touch with the Customer Care and Technical Helpline.	Chat to them about the problem with your tool.	They will provide technical and user advice or alternatively arrange a courier collection from your home.*	The team will assess and test and if necessary, repair your product back to full working order.	Your repaired tool will be returned to you via courier within 5 working days*.

Get in touch

If you need help or more information, please contact the Customer Care and Technical Helpline:

UK: 0800 0789647

Eire: 1800 932226

Opening hours are Monday – Friday, 8am-5pm

Availability of spare parts

Contact the customer service helpline for assistance or visit www.kingfisherspares.com

For assistance contact the customer services helpline:

UK 0800 0789647 uk@Kingfisherservice.com

EIRE 1800 932226 eire@kingfisherservice.com

Further information about this product can also be found at:

www.kingfisher.com/products

Manufacturer:

UK Manufacturer:

Kingfisher International Products Limited,
1 Paddington Square, London, W2 1GG,
United Kingdom

EU Manufacturer:

Kingfisher International Products B.V.
Rapenburgerstraat 175E
1011 VM Amsterdam
The Netherlands

EN www.diy.com

www.screwfix.com

www.screwfix.ie

**To view instruction manuals online,
visit www.kingfisher.com/products**